
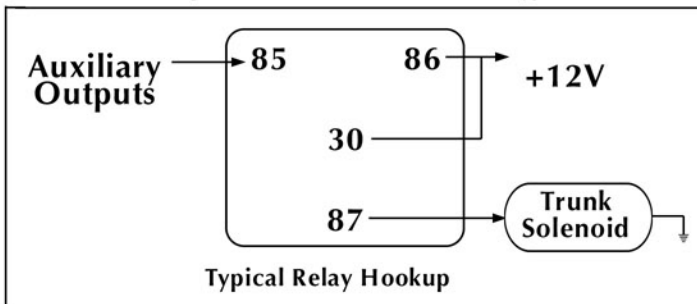


KE-1601 Wiring Diagram

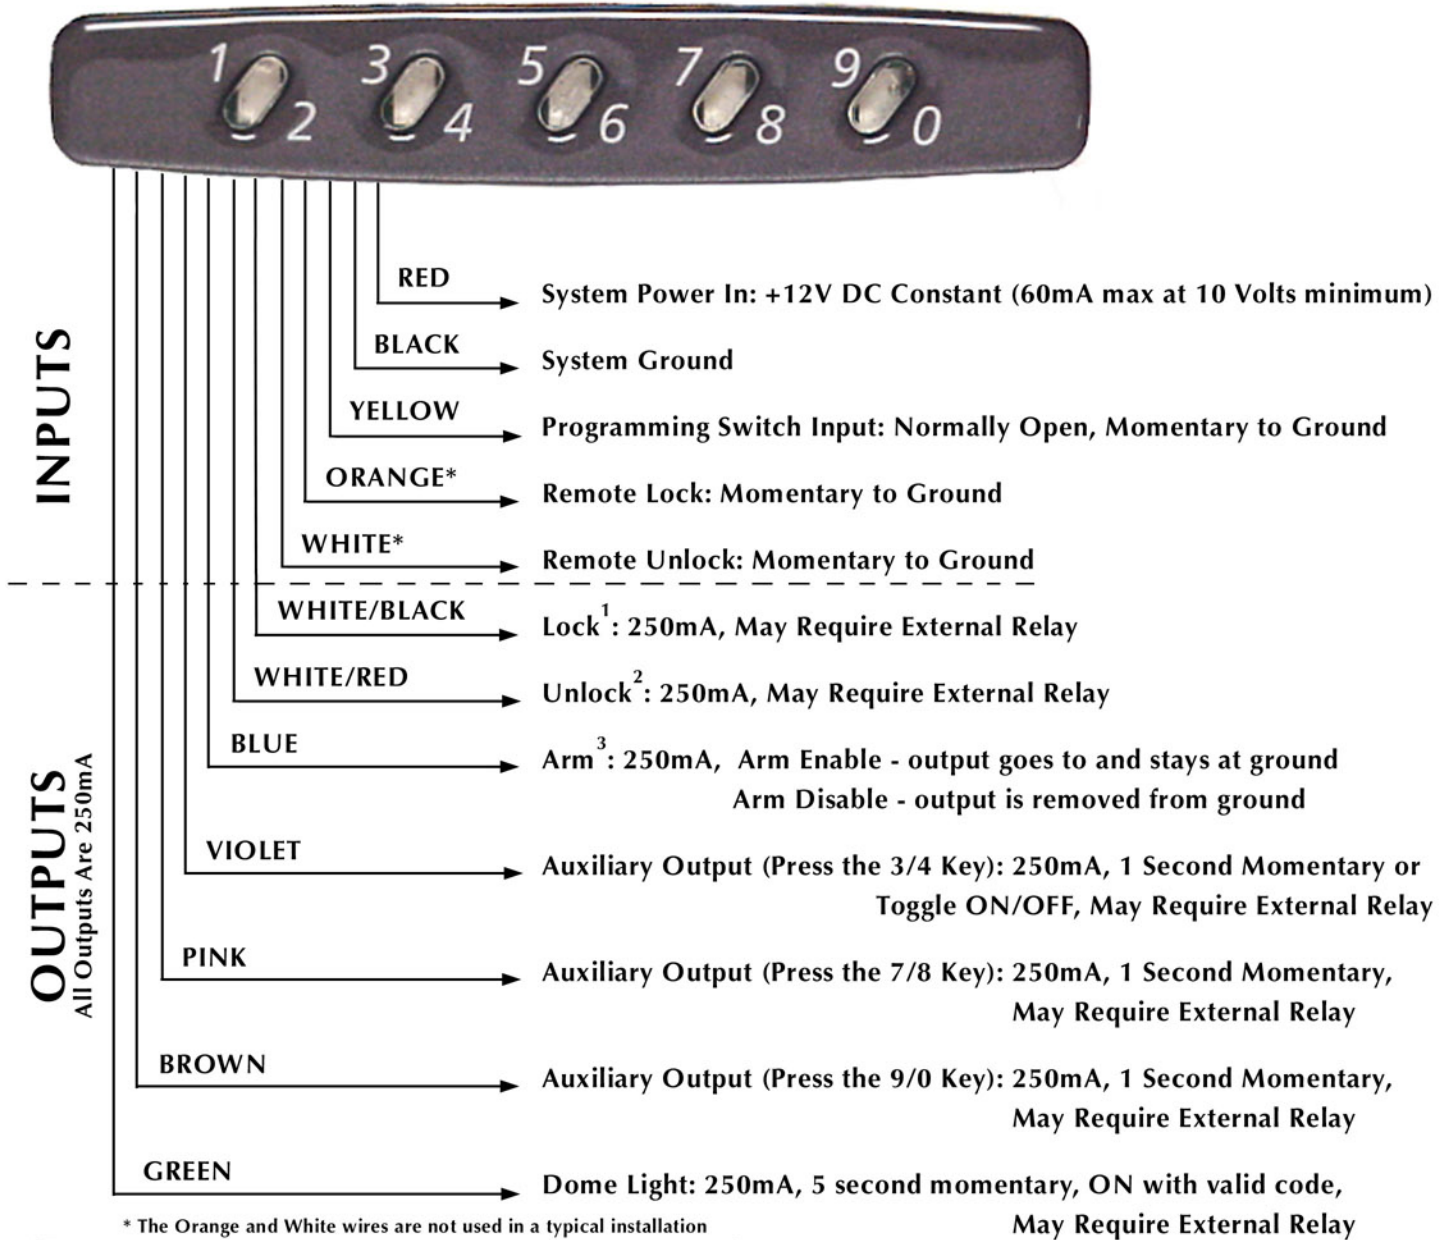

- 1) Lock Code 559: Locks the Door, Arm Enabled, Arms the Keypad
 Lock Code 557: Locks the Door and Arms the Alarm
 Lock Code 555: Locks the Door and Activates 3 Digit Convenience Codes(if enabled)
- 2) Any Valid User Code Unlocks the Door and Arm Disabled.
- 3) Arm Enabled by Lock Codes 559 and 557
 Arm Disabled by any valid User Code.