

ESSEX KEYLESS ENTRY MARK 2 PROGRAMMING INSTRUCTIONS
FOR ELEVATORS

- ~ ALL CODES MUST BE 5 DIGITS LONG. Digits may be repeated (EXCEPT 5-5-5.)
- ~ EACH FLOOR (RELAY OUTPUT) REQUIRES 3 CODES.
- ~ EACH FLOOR MUST HAVE ITS OWN OWNER'S CODE. ALL OWNERS' CODES MUST BE DIFFERENT FROM EACH OTHER.
- ~ TO SPEED PROGRAMMING AND ELIMINATE REDUNDANCIES IT HELPS TO SELECT AND LIST **ALL** CODES BEFORE STARTING TO PROGRAM. WITH 5-PAD TOUCHPADS USE ONLY ODD DIGITS. This avoids "shadow" codes.
- ~ EACH FLOOR MUST HAVE ITS OWN FLOOR MANAGER'S CODE. ALL FLOOR MANAGERS' CODES MUST BE DIFFERENT FROM EACH OTHER AND FROM EVERY OWNER'S CODE.
- ~ FACTORY INSTALLED CODES ARE RECORDED **ONLY** IN THE ORIGINAL OWNER'S GUIDE. Space is provided for changed codes.
- ~ ENTERING "1-1-1-9" AFTER A VALID PROGRAMMING CODE PRODUCES A TRIPLE CHIRP AT THE TOUCHPAD.
- ~ TO CHANGE AN OWNER'S CODE FIRST REQUIRES ACCESS TO THE CONTROL MODULE. Not so to change other codes.
- ~ A PAUSE OF MORE THAN 5 SECONDS BETWEEN PUSHES RESETS THE SYSTEM AND THE PROGRAMMING SEQUENCE MUST BE STARTED OVER AGAIN.

OWNER'S CODE Press and release **ONLY** the button switch for desired circuit. Then, from the touchpad, enter "1-1-1-9" followed by the new Owner's Code for that floor. Wait at least 5 seconds and without touching the button switch, proceed to program the new floor manager's code (see next step).

FLOOR MANAGER'S CODE Work from the touchpad. Enter the Owner's Code that was just programmed followed smoothly by "1-1-1-9" and by the desired Floor Manager's Code for that floor. Wait at least 5 seconds and without touching the button switch, proceed to program the new access code (see next step).

ACCESS CODE Work from the touchpad. Do not touch the button switch. Enter the Floor Manager's Code that was just programmed followed smoothly by "1-1-1-9" and by the desired Access Code for that floor. If desired, the same access code may be programmed for more than one floor.

CVRCRD12.PM3