


KE-1602 Wiring Diagram

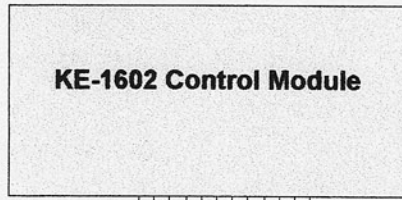

Note: Additional Keypads Can Be Connected in Parallel to The KE-1602 Control Module



4' Keypad Cable

INPUTS

- RED → System Power In, +12V DC Constant (150mA max, 10 Volts minimum)
- BLACK → System Ground
- YELLOW → Programming Switch, Normally Open, Momentary to Ground
- ORANGE → Remote Lock, Momentary To Ground

OUTPUTS

All Outputs Are - 250mA

- WHITE → Common - Lock/Unlock Relay, Internally Fused
- WHITE/BLACK → Lock Relay ¹, Rated for 6 Amps
- WHITE/RED → Unlock Relay ², Rated for 6 Amps
- BLUE → Alarm Arm / Disarm ³, - 250mA, Arms: Negative Output Goes and Stays Low
Disarms: Negative Output Goes and Stays High
- VIOLET → Auxiliary Output (Press The 3/4 Key): - 250mA, 1 Second Momentary or Toggle ON/OFF, May Require External Relay
- PINK → Auxiliary Output (Press The 7/8 Key): - 250mA, 1 Second Momentary, May Require External Relay, Internally Fused
- BROWN → Auxiliary Output (Press The 9/0 Key): - 250mA, 1 Second Momentary, May Require External Relay
- GREEN → Dome Light Relay, Rated for 5 Amps, 5 Second Momentary, On with Valid Code, Connect Across Door Jamb Light Switch



1. Lock Code 559 Locks The Door, Arms The Alarm, Arms The Keypad
Lock Code 555 Locks The Door, Activates 3-Digit Convenience Codes*
2. Any Valid User Code Unlocks The Door And Disarms The Alarm
3. Alarm is Armed By Lock Code 559
Alarm is Disarmed By Any Valid User Code

* 3-Digit Convenience Codes Require A System Setup Programming Command. When Enabled, Codes Longer Than 3 Digits Will Operate On The First 3 Digits. Lock Codes 559 Cancel Convenience Code Mode

